



47047-01 Color Indicating Desiccant Dryer

Warning: Keep out of reach of children and pets. Item contains silica desiccant, do not consume.

- **Blue Color:** Desiccant is not yet depleted.
- **Pink Color:** Desiccant is depleting, recharge once all desiccant is pink.
- **Brown Color:** Desiccant has surpassed its service life, replace dryer.

To recharge desiccant:

- Carefully twist and pull black cap to access desiccant
- Pour desiccant onto a paper plate
- Microwave on high for 3 minutes
- Stir desiccant *Desiccant will be hot*
- Microwave on high an additional 3 minutes
- Allow desiccant to cool
- Fold plate and pour desiccant into dryer housing
- Twist and push cap until fully seated into dryer tube

Do not microwave in housing