


WARNING: High Voltage! Disconnect power to the EOG before servicing.

EOG Intake Air Dryer Installation Instructions:

1. Using a drill and #2 Phillips bit, install the provided screw through the hole of the cartridge clip and through the middle dimple of the EOG chassis.
2. Remove the EOG enclosure cover. Clean any plastic fragments from the chassis interior.
3. Remove the original, clear intake hose and blue filter from the Corona Discharge (CD) cell's barb and discard.
4. Install the provided new, longer intake hose onto the CD cell's barb and route it out of the same enclosure hole as the previously removed tubing. Ensure the CD cell is firmly seated within its retaining clips.
5. Remove the round, blue seal from the bottom of the air dryer cartridge.
6. Remove the black cap covering the air dryer's barbed fitting and attach the new intake tubing to the barbed fitting.
7. Install the dryer cartridge into the cartridge clip.
8. Replace the enclosure cover, restore power to the unit, and return it to service. Installation is finished!

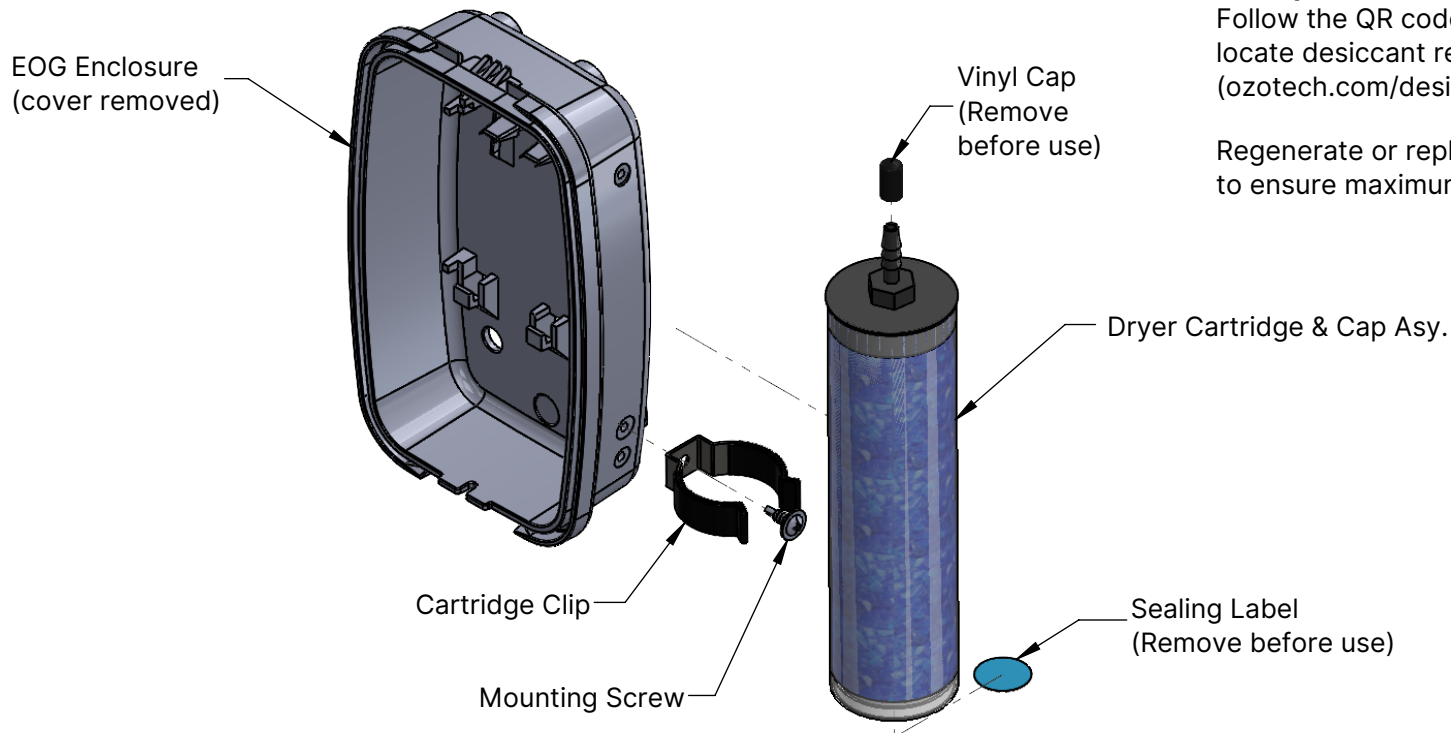

Pro Tip:

Follow the QR code link found on the dryer cartridge to locate desiccant regeneration instructions (ozotech.com/desiccantrecharge).

Regenerate or replace the desiccant media when it is pink to ensure maximum EOG performance and life.